## INSTALLATION MANUAL



model "LEAF"



# Thank you for choosing the product FLAMENEO

You are only a few steps away from your experience with your fireplace


"LEAF"



All the components have been packed so they are delivered safely and without damage.

Take out the components carefully and keep the box for the case of claim or return of the product.

# CONTENT OF THE PACKAGING

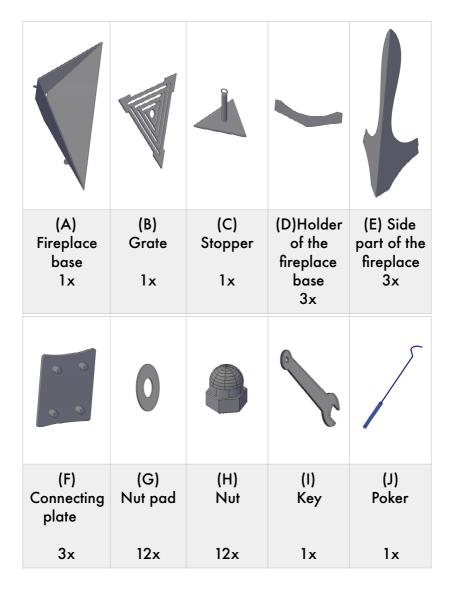




In the following **5 steps** we will present you the installation process.

Ask a second person for assistance. It will be easier, safer and more fun.




- 1. Put the fireplace holder (D) into the prepared openings on the inside of the side part of the fireplace (E).
- 2. While inserting, expand both sides of the side part of the fireplace (E) as the arrows show in the picture below.
- 3. Repeat the process 3 times so the holder (D) is on each side part of the fireplace (E)
- 4. Make sure that the orientation of the holder (D) is identical to the image in the picture below.

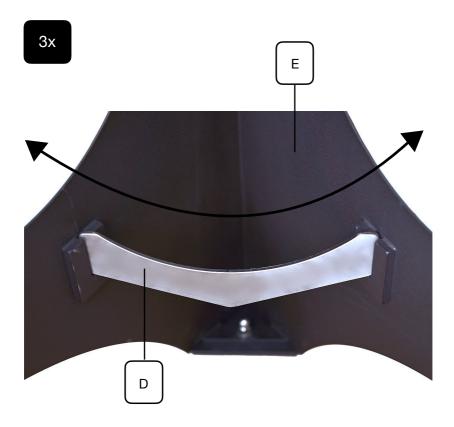



- 1. Place 2 side parts of the fireplace (E) to each other.
- 2. Put on the connecting plate (F) with twists into the openings on the side parts of the fireplace (E)
- 3. With the help of the nuts (H) secure the connection of the side parts of the fireplace (E). Place the pads (G) under the nuts (H). Use the key (I) to tighten.
- 4. Repeat the process 3 times so all three side parts of the fireplace (E) are connected.

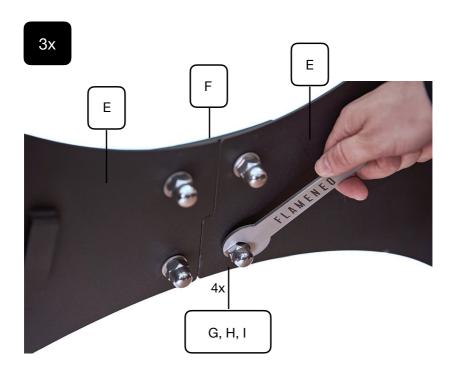




- Put the fireplace base (A) onto the holders of the fireplace base (D)
- 2. While putting in the fireplace base (A) be careful not to damage the side parts of the fireplace (E).
- 3. We recommend to keep the protection covers of the edges and remove these only after the placement of the fireplace base (A).





- 1. Place the stopper (C) onto the opening of the fireplace base (A). You will avoid that the ashes get onto the floor.
- 2. Make sure that the orientation of the stopper (C) is identical to the image in the picture below.

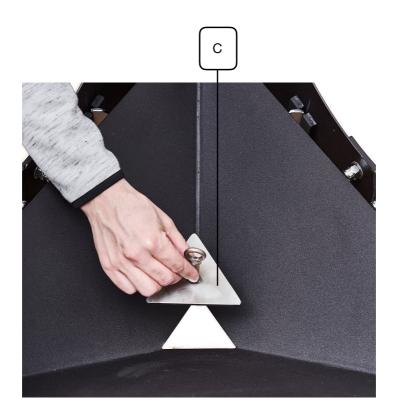



- Place the grate (B) onto the fireplace base (A). The space under the grate will enable the air to flow and therefore support burning.
- 2. Make sure that the orientation of the grate (B) is identical with the image in the picture below.









- 1. Before you start with the cleaning of your fireplace make sure that it is cold and completely extinct.
- 2. Place a container under the base of the fireplace (A) (not included in the packing)
- Place the poker (J) on the hook which is on the stopper (C) and by pulling upwards take out the stopper (C) together with the grate (B) and remove ashes and other dirt.
- 4. In case of colour damage find out about the choice and use of appropriate colour. The parts of the fireplace, under the influence of the fire, may change colour, which does not affect the functionality of the fireplace and is not considered as manufacturing fault.





# 1. Safety adive

Read the instructions for the use of the fireplace in this manual and keep this carefully. While assembling the fireplace all the steps shown in the Installation Manual must be followed. Do not use the fireplace if a correct assemblage has not been executed.

#### 2. Fuel

In the Flameneo fireplaces only wood, wooden briquettes or pellets can be burned.

It is forbidden to burn liquid fuel and waste.

In no way use highly flammable substances to start the fire (e.g. petrol, alcohol, thinner etc.)

Other than allowed fuel might lead to the damage of the fireplace or to its aesthetic damage.

If the fireplace is used with other than allowed fuel the manufacturer does not bear any responsibility for such use and because it comes to the use of the fireplace in conflict with the manufacturer's recommendations the quarantee provided by the manufacturer is forfeited.

### 3. Danger of burns

The outer surface of the fireplace is hot during its use and represents a danger for burns. While using the fireplace keep to the following principles:

- do not touch the parts of the fireplace when in use,
- do not leave the fireplace with a burning fire without supervision,
- do not leave children unsupervised in the vicinity of the fireplace
- do not use the fireplace in closed spaces there is danger of intake of harmful fumes



# 4. Safety distances

In the visible area of the fire where it comes to the direct heat radiation, a minimum distance of 110 cm must be kept from flammable materials (e.g. flammable parts of construction, wood, furniture, decorative textiles, carpets, curtains etc.) The distance is measured from the side part of the fireplace (E). As protection from falling sparks a non-flammable layer must be placed (e.g.ceramics, stone, glass or metal) on flammable surfaces (e.g. carpet, parquett floor, cork etc.)

#### 5. Fire

When using appropriate and recommended type of fuel (e.g. wood, wooden briquettes, pellets) a spark may escape the fireplace onto the area outside of the fireplace where a fire may start. To minimise the risk of fire remove all flammable objects from the immediate vicinity of the fireplace, this also outside of the recommended miminum safety distances. In case of an unexpected occurence of fire outside of the fireplace (A) proceed as follows:

- if the situation allows it try to extinguish the fire. Use a fire extinguisher or water. While using water be aware of the danger of electric current
- if you cannot do it yourself or the fire is spreading too fast, call for professional help immediately Firefighters!
- 6. Unauthorised technical adjustments

It is prohibited to interfere with the structure of the fireplace. In case of unauthorised technical adjustments the manufacturer does not bear any responsibility for the safety in the use and the guarantee is automatically forfeited. It is allowed to explicitly use spare parts designed by the manufacturer!

